



[WWW.PALLETFORKS.COM](http://WWW.PALLETFORKS.COM)  
**TITAN**  
ATTACHMENTS



## OWNER'S MANUAL

---


**MPN(s):**

**SKU(s):**

UPC(s):

PARTS DIAGRAM / EXPLODED VIEW

---

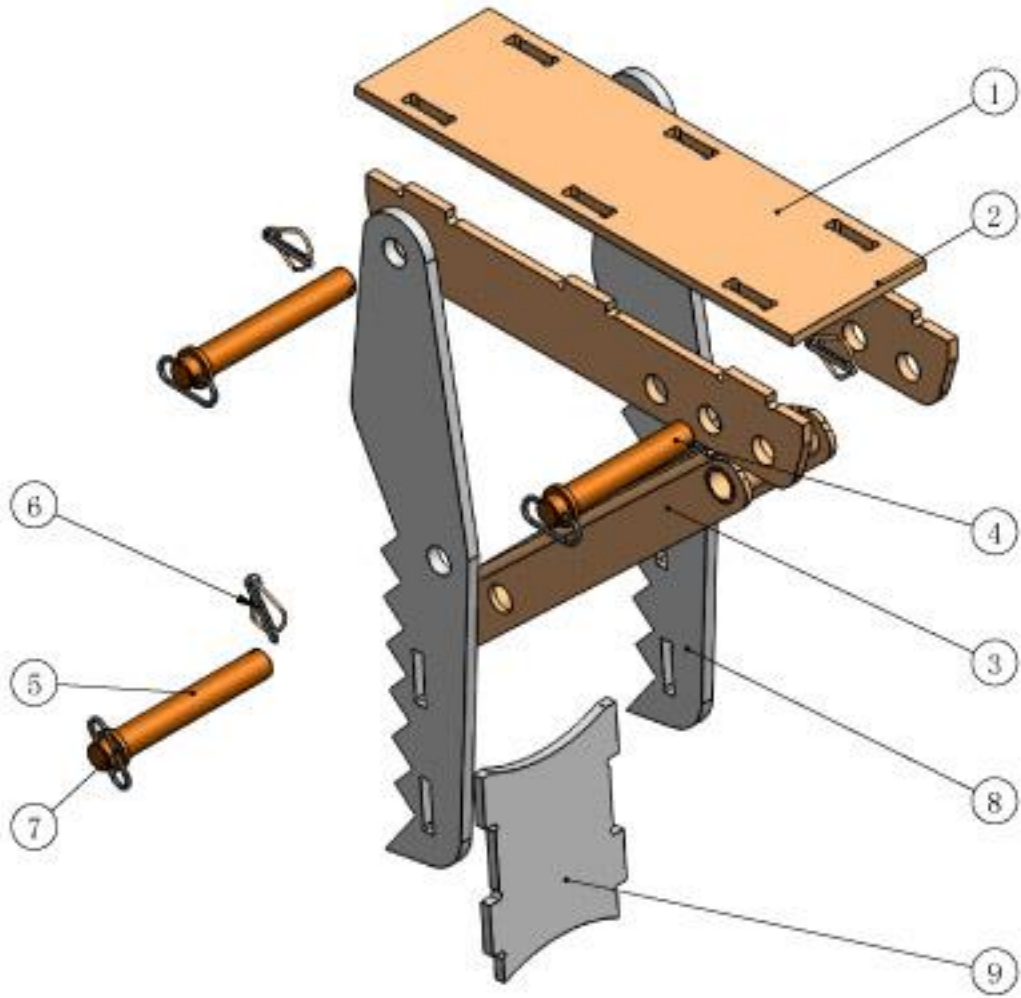

<b>KEY</b>	<b>BOX</b>	<b>DESCRIPTION</b>	<b>QTY</b>
(1)		Upper Plate	1
(2)		Side Plate	2
(3)		Support Brace	1
(4)		Short Pin	1
(5)		Long Pin	2
(6)		Lynch Lock Pin	3
(7)		Pin Pull Ring	3
(8)		Jaw Plate	2
(9)		Back Plate	1




# ASSEMBLY INSTRUCTIONS

---


## Step 1 – Assemble Top Part

- Align raised tongues of the **Side Plates (2)** with the slots on the **Upper Plate (1)**, and pressed to lock all parts in place. This forms the **Top Assembly**.

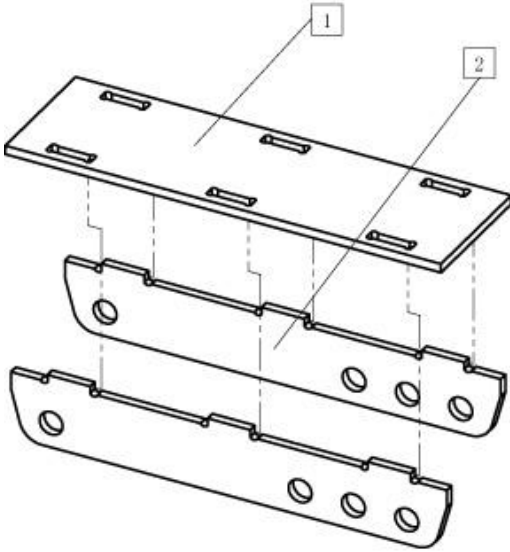

## Step 2 – Assemble Jaw Part

- Align raised tongues of the **Back Plate (9)** with the slots on the **Jaw Plates (8)**, and pressed to lock all parts in place. This forms the **Jaw Assembly**.

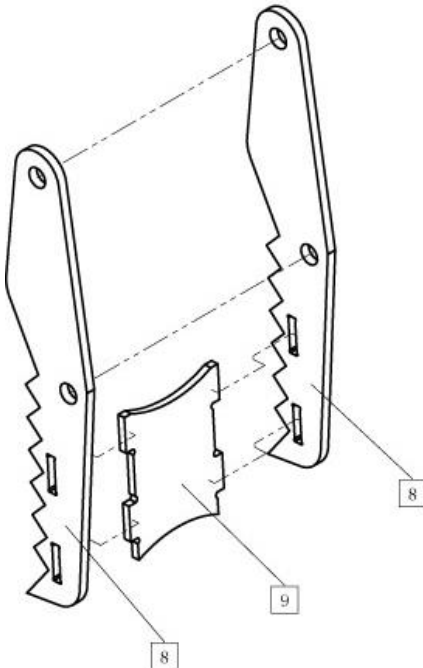

### Step 3 – Total Thumb Assembly

- Align the back holes of **Top Assembly** with the top holes of **Jaw Assembly**. Push **Long Pin (5)** through all holes. Lock the **Long Pin (5)** by inserting **Lynch Lock Pin (6)** into the end hole of **Long Pin (5)**, and flip the lock ring down to secure the whole set in place.
- Align the top holes of **Support Brace (3)** with the front holes of **Top Assembly**. Push **Short Pin (4)** through all holes. Do not insert **Lynch Lock Pin (6)** until the last step.
- Align the lower holes of **Support Brace (3)** with with the lower holes of **Jaw Assembly**. Push **Long Pin (5)** through all holes. Do not insert **Lynch Lock Pin (6)** until the last step.
- Lock the **Long Pin (5)** and **Short Pin (4)** by inserting **Lynch Lock Pins (6)** into the end hole of both pins and flip the lock rings down to secure the total **Thumb** Assembly in place.

