




TITAN
ATTACHMENTS


QUICK ATTACH ADAPTER W/ SPACER BRACKETS

Owner's Manual

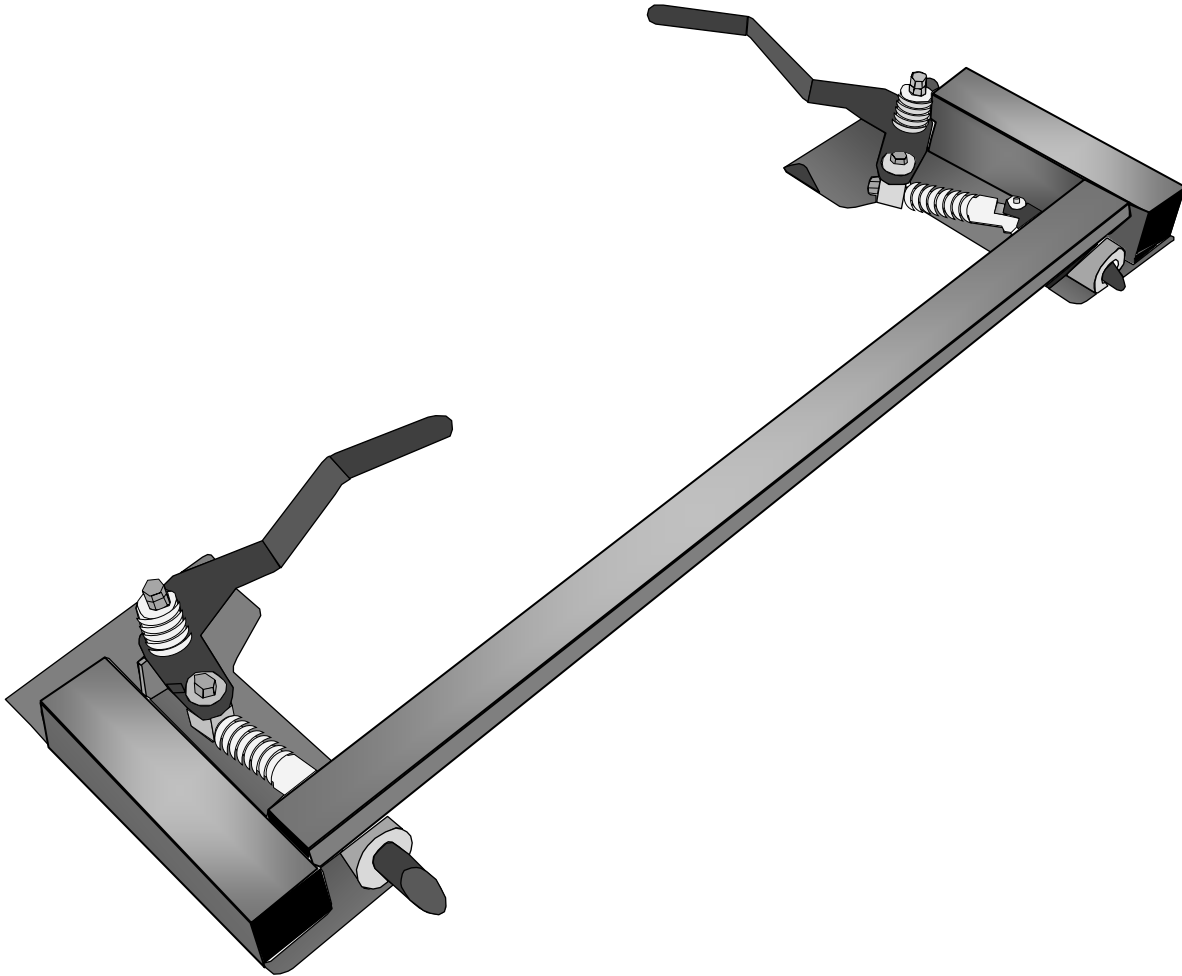


This Product is Distributed Exclusively by
Titan Distributors Inc
141 Eastley St. Ste. 113 Collierville, TN 38017
Customer Service
800 - 605 - 8241
www.titan.fitness

QUICK ATTACH ADAPTER PARTS LIST

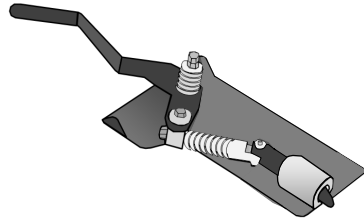

x 2

QUICK ATTACH BRACKETS



CROSS BRACE



x 2

SPACERS

WARNING


The handles on the Titan Quick Attach Brackets are reversed for shipping purposes only. Handles must be corrected before the quick attach is fully functional.

QUICK ATTACH ADAPTER ASSEMBLY

STEP 1

- Remove tabs from bucket.



Notes: Recommended using a cutting torch for easy removal.

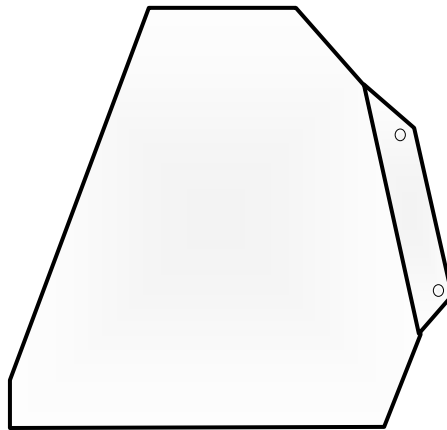

Mount plates are available to utilize the bucket with your new Titan Quick Attach adapter.


STEP 2

- Line the spacers up square to the edge of the quick attach plate.
- Align them vertically with the top bend to make sure they are sitting flat.
- Clamp them in place with a c-clamp and weld the spacers to the quick attach plates.

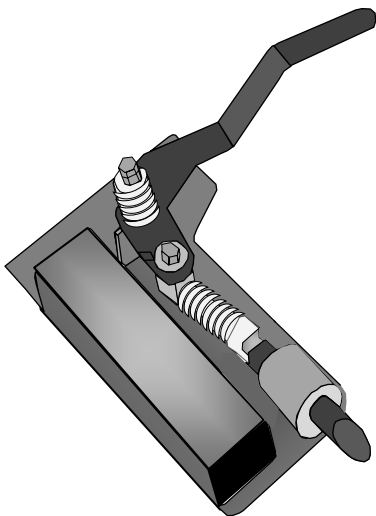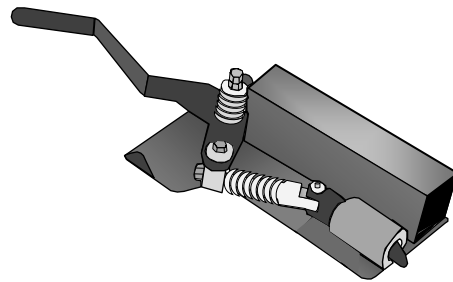

STEP 3

- Align the bottom of the tabs square to the bottom of the spacers.
- Clamp them in place with a c-clamp and weld the tabs to the spacers.

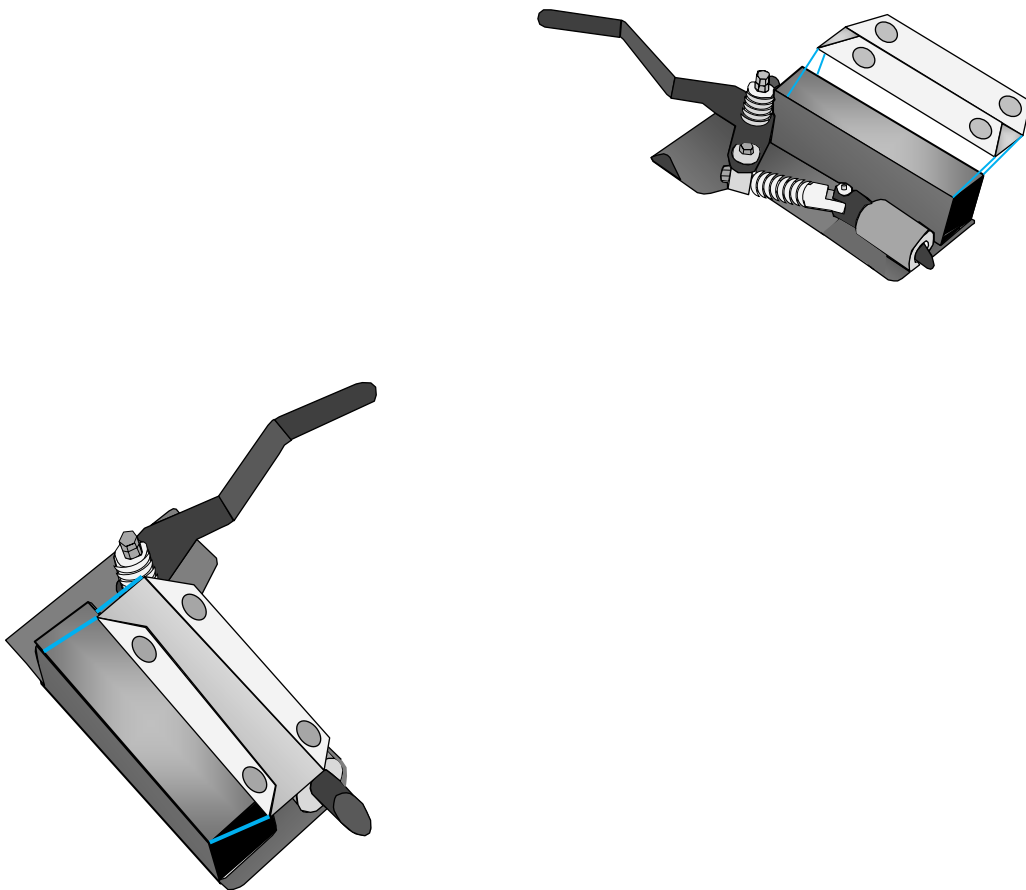

STEP 4

- Mount the quick attach brackets to your machine and measure the space between the two spacers.
- Make adjustments to the cross bracing if necessary.
- Lay the quick attach brackets on a flat surface and space them according to the measurements taken.
- Lay the cross brace in between the spacers and on top of the pin sleeves.
- Clamp them in place with a c-clamp and weld the cross brace to the spacers.

