

10 ALUMINUM LOADING RAMPS

120S, (1/2)120S

311420, 311421




Operator's Manual



Read the Operator's Manual entirely. When you see this symbol, the subsequent instructions and warnings are serious follow without exception. Your life and the lives of others depend on it!

TITAN
RAMPS

PARTS DIAGRAM / EXPLODED VIEW

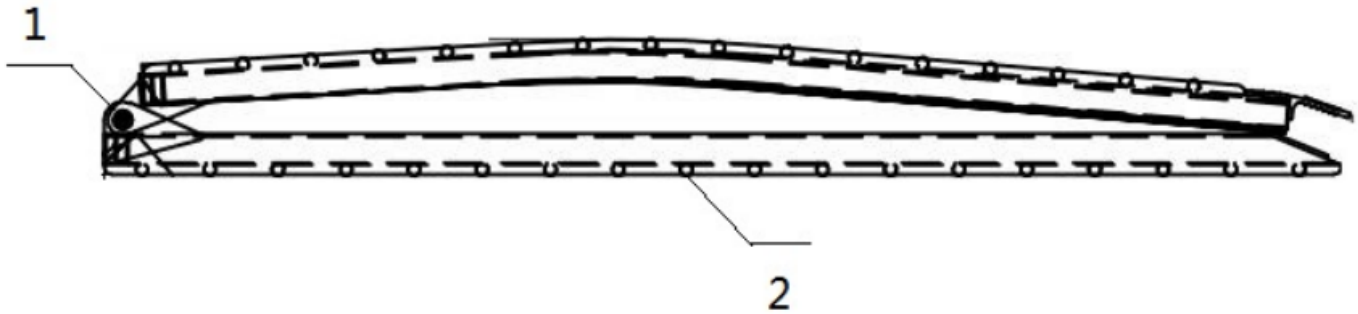

AVAILABLE AS A SINGLE RAMP OR AS A PAIR

KEY	BOX	DESCRIPTION	QTY
(1)	1	BOLT AND NUT IN HINGE	2
(2)	1	SECTION 1	1
(3)	1	SECTION 2	1
(4)	1	STRAP	1

SAFETY WARNING: Maximum recommended loading height is 36" (22 degrees incline). Do not exceed this loading height for safety purposes. Do not exceed maximum Weight Capacity: 600 LB SINGLE, 1200 LB PAIR.

NO ASSEMBLY IS NEEDED.

1. The bolt must be inserted and hand-tightened through the barrel hinge.
2. Park vehicle or trailer on flat, firm ground.
3. Place ramps on the tailgate or trailer to accommodate the wheelbase of the loading vehicle.
4. Ensure the plate or fingers of the ramp are securely in place.
5. Install and secure safety straps. An illustration of how to secure the safety straps is as follows:
6. Slowly ride machine up the ramps making sure tires are centered on the ramp at all times.
7. Acceleration must be slow, controlled, and constant. The operator must remain in control of machinery at all times during loading and unloading.
8. Use the brake as necessary to control your speed while unloading. Sudden or erratic braking or accelerating will cause ramps to pull away from the tailgate or trailer.

ACKNOWLEDGEMENT OF RISK AND RELEASE OF LIABILITY

The use of any equipment, including this one, involves the potential risk of injury. Apart from any warranty claim that might be presented for a claimed defect in material or workmanship of the product, you accept and assume full responsibility for any and all injuries, damages (both economic and non-economic), and losses of any type, which may occur, and you fully and forever release and discharge Titan, its insurers, employees, officers, directors, associates, and agents from any and all claims, demands, damages, rights of action, or causes of action, present or future, whether the same be known or unknown, anticipated, or unanticipated, resulting from or arising out of the use of said equipment.

This equipment must be used with care by capable and competent individuals under supervision, if necessary.

TITAN LIMITED WARRANTY: TERMS, EXCLUSIONS AND LIMITATIONS OF REMEDIES

This product comes with a one (1) year limited warranty that can be found at www.titanramps.com/warranty.html. Please review the same for all details regarding the Titan Limited Warranty.

THE TITAN LIMITED WARRANTY FOUND AT WWW.TITANRAMPS.COM/WARRANTY.HTML IS EXCLUSIVE AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE, EACH OF WHICH IS HEREBY DISCLAIMED.



NEED HELP? CONTACT US FIRST.

1-800-605-7555

info@titanramps.com

www.titanramps.com

© 2021 Titan Brands