

# 10FT HD 4 BEAM ALUMINUM ARCHED RAMP

---

120D, (2)120D

311415, 311416



## Operator's Manual




Read the Operator's Manual entirely. When you see this symbol, the subsequent instructions and warnings are serious follow without exception. Your life and the lives of others depend on it!

**TITAN**  
RAMPS

**PARTS DIAGRAM / EXPLODED VIEW**

---

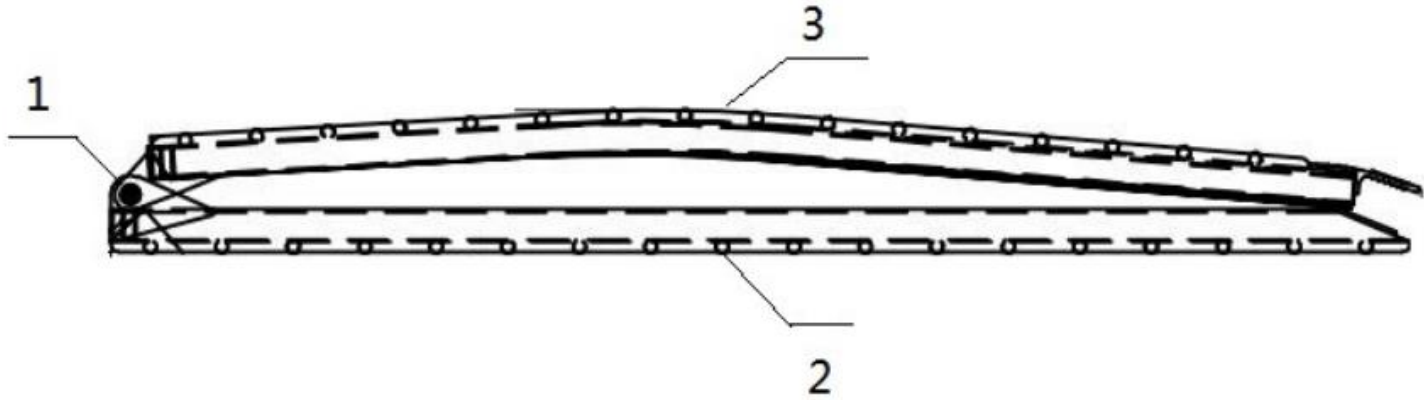

AVAILABLE AS A SINGLE RAMP OR AS A PAIR

KEY	BOX	DESCRIPTION FOR SINGLE RAMP	QTY
(1)	1	BOLT AND NUT IN HINGE	2
(2)	1	SECTION 1	1
(3)	1	SECTION 2	1
(4)	1	STRAP	1

**SAFETY WARNING**

---

Maximum recommended loading height is 36" (22 degrees incline).

Do not exceed this loading height.


Weight Capacity 1,500 lb. Each

## ASSEMBLY INSTRUCTIONS

---

### NO ASSEMBLY IS NEEDED.

1. The bolt must be inserted and hand-tightened through the barrel hinge.
2. Park vehicle or trailer on flat, firm ground.
3. Place ramps on the tailgate or trailer to accommodate the wheelbase of the loading vehicle.
4. Ensure the plate or fingers of the ramp are securely in place.
5. Install and secure safety straps.
6. Slowly ride machine up the ramps making sure tires are always centered on the ramp.
7. Acceleration must be slow, controlled, and constant. The operator must always remain in control of machinery during loading and unloading.
8. Use the brake as necessary to control your speed while unloading. Sudden or erratic braking or accelerating will cause ramps to pull away from the tailgate or trailer.

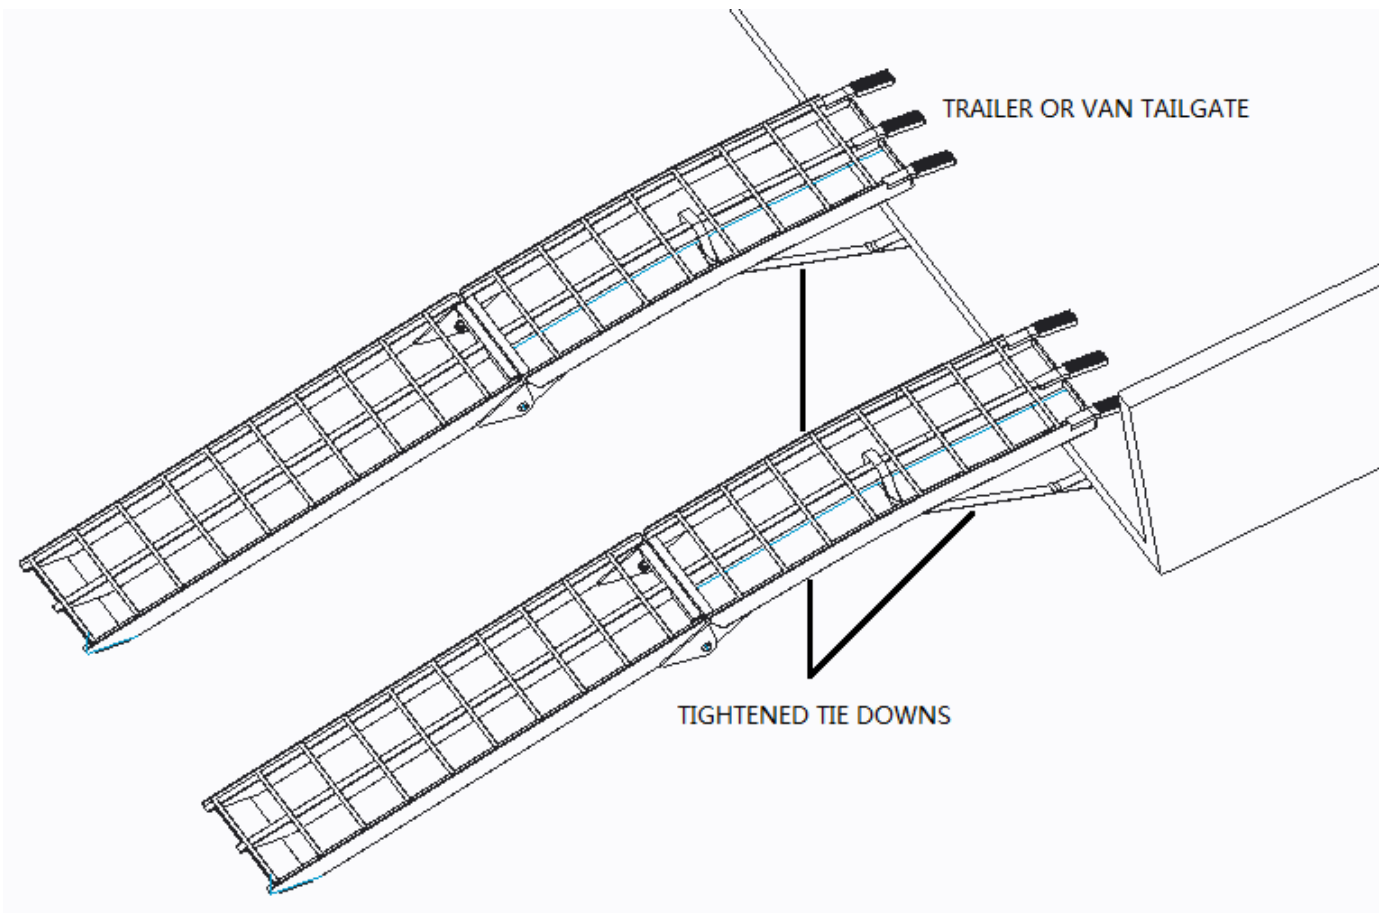

## **ACKNOWLEDGEMENT OF RISK AND RELEASE OF LIABILITY**

---

The use of any equipment, including this one, involves the potential risk of injury. Apart from any warranty claim that might be presented for a claimed defect in material or workmanship of the product, you accept and assume full responsibility for any and all injuries, damages (both economic and non-economic), and losses of any type, which may occur, and you fully and forever release and discharge Titan, its insurers, employees, officers, directors, associates, and agents from any and all claims, demands, damages, rights of action, or causes of action, present or future, whether the same be known or unknown, anticipated, or unanticipated, resulting from or arising out of the use of said equipment.

This equipment must be used with care by capable and competent individuals under supervision, if necessary.

## **TITAN LIMITED WARRANTY: TERMS, EXCLUSIONS AND LIMITATIONS OF REMEDIES**

---

This product comes with a one (1) year limited warranty that can be found at [www.titanramps.com/warranty.html](http://www.titanramps.com/warranty.html). Please review the same for all details regarding the Titan Limited Warranty.

**THE TITAN LIMITED WARRANTY FOUND AT [WWW.TITANRAMPS.COM/WARRANTY.HTML](http://WWW.TITANRAMPS.COM/WARRANTY.HTML) IS EXCLUSIVE AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY**

**IMPLIED WARRANTY OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE, EACH OF WHICH IS HEREBY DISCLAIMED.**



**NEED HELP? CONTACT US FIRST.**

**1-800-605-7555**

[info@titanramps.com](mailto:info@titanramps.com)

[www.titanramps.com](http://www.titanramps.com)

© 2021 Titan Brands